


**PG7600 VACUUM RELIEF VALVE,
P/N 401050, INCLUDES:**

QTY	PART NO	DESCRIPTION
1	401050	Vacuum relief valve assembly
1	100272	Gland (on PG7600 VAC port)
1	101200	Collar (on PG7600 VAC port)
1	560002	Instruction Sheet

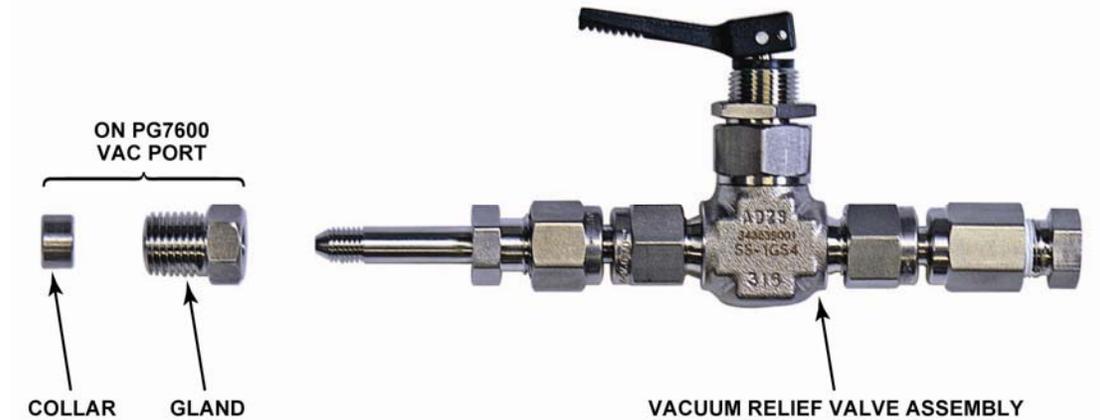

Vacuum relief valve is shown in the closed position.

GENERAL INSTALLATION

- ❶ Remove gland, collar and plastic plug from the PG7600™ vacuum port.
- ❷ Install gland and collar onto vacuum relief valve assembly.



Collar threads left-handed. Ensure collar is fully threaded. The plastic plug is not used.

- ❸ Screw the adaptor (as assembled) into the PG7600™ vacuum port. Torque to 15 Nm (Newton meter).

PG7600 is a trademark, registered and otherwise, of **DH Instruments, Inc.**